

INDOOR FLYING CHECKLIST

1. Prop guards installed
2. RC Signal Lost: HOVER
3. Battery Low – Smart RTH: OFF
4. Visual Navigation – Obstacle Avoidance: OFF
5. Display Radar Chart: ON
6. Visual Positioning – Advanced Settings: ON (Can be OFF for flying over ground obstacles)
7. Control Sensitivity: EXP – All values set to 0.10 (Sensitivity – leave at default or set brake up to 200)
8. Multi-Flight Mode – ON – Tripod Mode, Cinematic Mode (Use Atti mode, but must brake manually)
9. Remain 3 feet below ceiling